

SHOPRIDER®

ATTENTION
Please read your
owner's manual
before driving your
scooter.



9D

Owner's Manual



CONTENTS

INTRODUCTION	3
FEATURE GUIDE	3
SAFETY ADVICE	4
EMI Warning	6
ADJUSTMENTS	8
SCOOTER TILLER CONTROLS	10
FREE WHEEL OPERATION	12
STARTING TO DRIVE YOUR SCOOTER.....	13
EXTRA GUIDELINES IN THE CONTROL OF YOUR SCOOTER	14
BATTERIES AND BATTERY CHARGER	15
MAINTENANCE	16
TROUBLE SHOOTING GUIDE	17
TECHNICAL SPECIFICATIONS	18
NOTES	19
DISCLAIMER	20

SHOPRIDER®

 
INTRODUCTION

Congratulations on your purchase of the Shoprider® scooter. This scooter incorporates the latest innovative designs patented and only available on a Shoprider® scooter. This scooter can be used in confined spaces outdoors. Direct drive transaxles and electromagnetic brakes give a safe and efficient ride. This Shoprider® scooter is designed for persons with limited mobility.

Please read this manual carefully and thoroughly before using your scooter and make sure you understand all the instructions.

FEATURE GUIDE

1. Tiller Handle Bar
2. Detachable Seat
3. Armrests
4. Pneumatic Black Tire
5. Footrest Pad
6. Front Bumper
7. Headlight
8. Detachable Basket
9. Indicator Light
10. Taillight

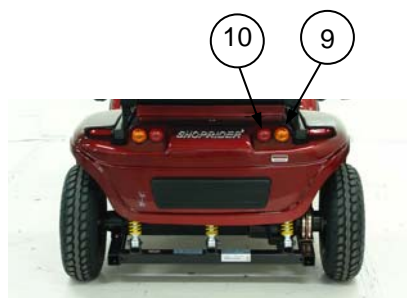



SAFETY ADVICE

- Do not carry passengers.
- This mobility Product is intended to assist you. For your own safety, please read the Owner's Manual before using the Scooter. If in any doubt, contact your supplier directly for advice.
- Do not exceed inclines over 12 degrees (20% grade).
- Driver weight may exceed weight of the unit, speed must be reduced when turning.
- Do not get on or off the scooter unless the brake is on and the scooter is switched off.
- Do not switch off the scooter while the scooter is moving.
- Do not drive the scooter where you can not safely or legally walk.
- Do not attempt to drive over curbs greater than 3 inches in height. Doing so could cause your scooter to turn over, causing personal injury or damage to the scooter. For curbs less than 3 inches, always approach them at an angle of 90 degrees and at a low speed.
- Do not drink or use a mobile phone when driving your scooter.
- Do not exceed the suggested user weight limit to use the product. Doing so, could cause personal injury and invalidate the warranty.
- Always keep your feet on the scooter when moving.
- Please make sure that you are physically fit to operate this unit. Consult your dealer/doctor for advice.
- Always slow down and proceed carefully when traveling over rough or uneven ground.
- For individuals with balance problems, practice getting on the scooter with the assistance of a qualified healthcare professional.
- Do not operate the scooter without anti-tip wheels installed.
- Do not use an escalator to move a scooter between floors or serious injury could occur.
- Do not drive the scooter on an incline that has oil, water or ice film on it.
- Do not try to lift the scooter by its seat, tiller, rear chassis cover, or any removable parts. Any of these could cause injury to the user or damage to the scooter.
- Do not use parts or accessories that are not authorized by the original manufacturer of the scooter.
- Before sitting in or exiting the scooter, REMOVE the key from the ignition. This will insure the POWER is off and the scooter can not move under its own power. As a general precaution, always remove the key from the ignition while the scooter is not in use. This will prevent the use by untrained and unauthorized persons.

SHOPRIDER®

- Do not connect any foreign device to the scooter battery or charging port. This could cause failure of the device, the scooter and personal injury.
- Make sure the tiller is properly adjusted and locked to the user or damage and injury could result.
- It is not allowed to have any person sitting in the scooter when transported by a vehicle, otherwise any injury or damage that might result.
- Do not use the scooter in the rain, near a shower or in a damp bathroom. Direct exposure to rain or dampness could cause the scooter to electrically malfunction and prematurely rust.
- Do not lean against or pull forward on the tiller while mounting or dismounting the scooter. Otherwise, injury may occur.
- Do not operate the unit or turn the key on while charging.
- Whenever a center bolt of the wheel assembly has been loosened, please replace a specified new bolt from authorized dealers and secure with a torque of 240 ± 5 kg-cm together with Loctite 271 adhesive (or equivalent).
- Charge batteries daily after use.
- Charging plug has to be removed from the scooter after charging.
- Battery cables must be securely fastened onto battery terminals by the authorized dealers before using the unit.
- Batteries must be tied down correctly and securely.
- Any loose cable can not be allowed when the unit is driving.
- Must check the battery charge remained before operating the unit.
- Always charge the batteries of the unit in a well ventilated area.
- If the unit went over or sank into deep water, please switch off power of the unit and consult with your authorized dealer for help right away.
- Switch off power of the unit while not in use or before charging, removing and installing the batteries. Otherwise, injury and/or damage to the unit or surrounding property may occur.
- Do not operate the unit in the way of exceeding to the product's specification listed in this owner's manual.
- Do not use the thumb/finger lever before the key switch is turned on, or the operation will be prohibited until to turn key switch off and then on.

EMI Warning



Shoprider® scooters may be susceptible to electromagnetic interference (EMI), which is a kind of interfering electromagnetic energy (EM) emitted from sources such as radio stations, TV stations, amateur radio (HAM) transmitters, two-way radio, and cellular phones. The interference (from radio wave sources) can cause the scooter to release its brakes, move by itself, or move in unintended directions. It can also permanently damage the scooter's control system. The sources of radiated EMI can be broadly classified into three types:

1. Hand-held portable transceivers (transmitters-receivers) with the antenna mounted directly on the transmitting unit. Examples include: citizens band (CB) radios, "walkie talkie", security, fire and police transceivers, cellular telephones, and other personal communication devices.

NOTE! Some cellular telephones and similar devices transmit signals while they are ON, even when not being used.

2. Medium-range mobile transceivers, such as those used in police cars, fire trucks, ambulances, and taxis. These usually have the antenna mounted on the outside of the vehicle.
3. Long-range transmitters and transceivers, such as commercial broadcast transmitters (radio and TV broadcast antenna towers) and amateur (HAM) radios.

NOTE! Other types of hand-held devices, such as cordless phones, laptop computers, AM/FM radios, TV sets, CD players, and cassette players, and small appliances, such as electric shavers and hair dryers, so far as we know, are not likely to cause problems to the scooter.

Scooter Electromagnetic Interference (EMI)

Because EM energy rapidly becomes more intense as one moves closer to the transmitting antenna (source), the EM fields from hand-held radio sources (transceivers) are of special concern. It is possible to unintentionally bring high levels of EM energy very close to the scooter's control system while using these devices. This can affect scooter movement and braking. Therefore, the warnings listed below are recommended to prevent possible interference with the control system of the scooter.

WARNINGS

1. Do not operate hand-held transceivers (transmitters-receivers), such as citizens band (CB)

SHOPRIDER®

radios, or turn ON personal communication devices, such as cellular phones, while the scooter is turned ON.

2. Be aware of nearby transmitters, such as radio or TV stations, and try to avoid coming close to them.
3. If unintended movement or brake release occurs, turn the scooter OFF as soon as it is safe.
4. Be aware that adding accessories or components, or modifying the scooter may make it more susceptible to EMI.

NOTE! There is no easy way to evaluate the overall immunity of the scooter.

5. Report all incidents of unintended movement or braking to your Shoprider® dealer, and note whether there are sources of EMI nearby.

WARNING: The original manufacturer and the importer of the scooter is not responsible for damage or injury incurred due to improper and unsafe use of our scooter.

ADJUSTMENTS

Tiller Angle Adjustment (Fig. 1)

On the left hand side at the base of the tiller



SHOPRIDER®

is a red lever. Push the lever to release the pin and select the required tiller angle. Refit the pin into one of the five location holes.

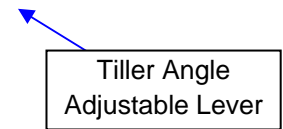 


Fig. 1

Seat Slide Adjustment (Fig. 2)

Pulling up on the seat slide lever allows the seat position to be adjusted forward or backward. Release the lever and the seat will lock in that position.



Fig. 2

SHOPRIDER®

Armrest Adjustment

Width (Fig. 3)

On the underside of the seat there are two hand knobs, one either side. Loosening the hand knob allows the arm rest to be adjusted to the required width, or removed for transportation.



Fig. 3

Do not use the scooter without the arms being fitted.

Height (Fig. 4)

The vertical square tube connected with the armrest can be reset to the desired position by re-tightening the hand knob for armrest height adjustment.



Fig. 4

Angle (Fig. 5)

Flip up the armrests to allow access to the adjustable bolt and lock nut, unscrew the lock-nut and screw the bolt in or out to increase or decrease the angle. Re-tighten the lock-nut. Your scooter is dispatched from the factory with the armrests set parallel to the floor.


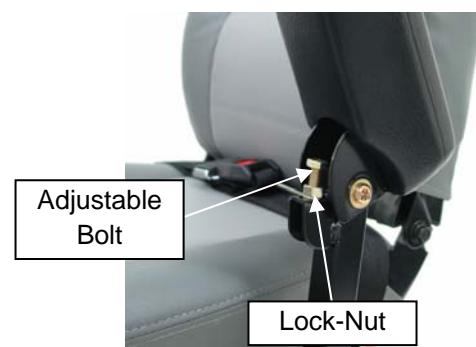 


Fig. 5

SHOPRIDER®

 SCOOTER TILLER CONTROLS

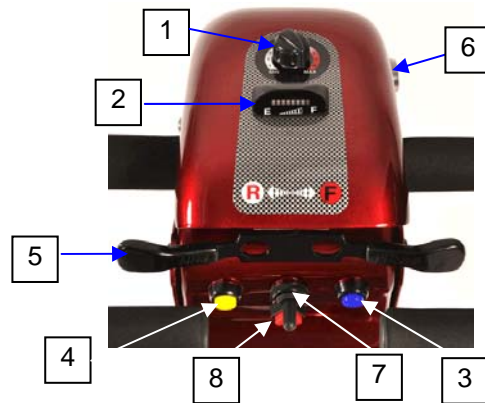

(1) Speed Controls

The speed control allows you to set a speed between 1 (minimum) and 10 (maximum). Turn the dial knob counter-clockwise to “minimum” to decrease speed, and clockwise towards “maximum” to increase your speed.

(2) Battery Level Indicator

The number of LED bars lit, shows the amount of charge left in your batteries. The amount of charge will only show at its true level when the scooter is in drive.

Caution – Do not allow the LED bars go out completely as complete discharge of the batteries could cause irreversible damage.

(3) Lights

A blue colored button at the rear of the tiller operates the lights.

(4) Horn

A yellow button at the rear of the tiller operates the horn.



(5) Thumb/Finger Lever Controls

The left thumb/finger lever controls the reverse and the right thumb/finger lever controls the forward motion. The amount of pressure applied to each lever will determine the speed the scooter travels at. Release the lever and the scooter will slowly come to a stop and the electromagnetic brake will be applied.

(6) On/Off Key Switch

Insert the key in the right side of the tiller. Turn the key and the LED bars will light up. There is a delay before the thumb/finger lever control can be operated, while the controller is checking the circuits.

(7) Indicator Switch

Operates turn indicator lights.

(8) Hazard Warning Switch

A red button operates all indicator flashers.

Electromagnetic Brake

The brake is automatically operated when the control levers are released. There is a slight delay when the scooter decelerates; this allows the scooter to come to a smooth stop.

 
SHOPRIDER®

FREE WHEEL OPERATION

The free wheel release lever (yellow handle) is located inside the left rear wheel. To disengage the motor, lift up the lever (the scooter can now be pushed). To re-engage the motor push down on the lever.

***WARNING! Always re-engage the free wheeling device after use.
Failure to do so may result in injury.***

The original manufacturer and the importer of the scooter is not responsible for damage or injury incurred due to improper or misuse of the scooter.

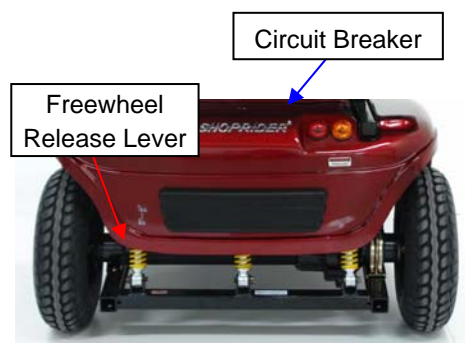



STARTING TO DRIVE YOUR SCOOTER

Getting Started

- Select a level area with plenty of space.
- Mount the scooter, either by lifting the arm and sliding on to the seat or rotate the seat outwards and then rotate the seat back to face the tiller.
- Adjust the tiller and seat as described previously.

Starting Scooter Movement

- Ensure that you are seated in a comfortable position.
- Turn the key to the ON position.
- Your speed setting should be on 1 or 2.
- Pull your right hand finger lever, the scooter will move forward slowly. The harder you pull the faster the scooter goes but will only reach the speed level that has been selected.
- Release the lever and the scooter will slowly come to a stop and the magnetic brake will be applied.

Steering

Steering the scooter is light and easy. Ensure when starting off you give a wide clearance when turning so that the rear wheels clear any obstacle that you are passing. When steering through limited spaces such as a doorway or when turning around, turn the tiller handles where you want to go and apply power gently. The scooter will turn very tightly, but will still move with complete stability as long as the speed is not too high.

Reversing

Before reversing ensure that the area behind is free from any hazards or obstructions. Adjust your speed setting to a low setting before you reverse. Pull/press the left thumb/finger lever, and steer wide of all corners and obstacles.

Dismounting

Before dismounting ensure that the key is turned to the off position.

CAUTION: Please ensure that care is exercised when entering or leaving the scooter and that the tiller and foot rest is not used for support.

SHOPRIDER®

EXTRA GUIDELINES IN THE CONTROL OF YOUR SCOOTER

Ramps

The stability of your scooter is governed by several factors such as the seating position, the angle of the slope and your height and weight. When approaching an incline, do so directly and not at an angle and whenever possible avoid making turns. When going down a ramp or slope keep the speed settings to slow. This will ensure there is a safe controlled descent. When the finger levers are released the scooter will slowly stop.

Safe Climbing Angle

 
Always follow the guidelines of the safe climbing angle shown as shown in figure 6.

Caution - Do not turn off the control key while the unit is in motion

Grass and Gravel

Please follow the guidelines given previously and your scooter will perform admirably over many surfaces. Avoid long grass, loose gravel and sand.

NOTE: You should not operate your scooter in wet weather or on wet surfaces. This may cause the motor to sort out.

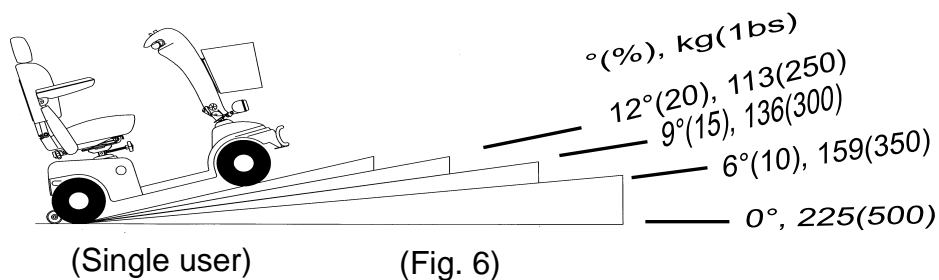

Angles and weights shown here for this scooter indicate the safe working angles for the user and equipment. Any scooter used outside these parameters may be unsafe and or cause future problems with the electrical systems

SHOPRIDER®

BATTERIES AND BATTERY CHARGER

The Shoprider® scooter is supplied with maintenance free, sealed lead acid batteries. Battery performance can be affected by temperature, terrain, condition of battery, type of battery charger, the weight of the user, wind speed, etc. The battery level indicator is only a guide and is most effective when the scooter is moving, only then is the true discharge level displayed.

- When the scooter stops the battery level indicator may indicate full.
- An active user can use up to 30% of battery capacity or more per day.
- Inactive users may only use 50% of battery capacity in a week.
- In both these instances the battery should be put on charge over night.

Battery Charger

 
The battery charger supplied is special to your scooter, and may not be suitable for any other power mobility product. Use only the charger supplied with your scooter; other marks of chargers may permanently damage your scooter batteries, and would void the warranty. All the information of battery charger and its operation instruction shall be referred to the user manual attached with the charger in its packaging paper box.

First Time Use

Prior to using your Portable scooter for the first time, you must charge the batteries fully (refer to Battery Charging Procedures). Charging may take up to 12 hours. Charging the batteries completely prior to first time use will benefit battery efficiency. Failure to do so may cause damage.

Charging

To charge the batteries connect the 3-pin male plug lead into the 3-pin female battery-charging socket located on the tiller. Plug the A/C cord plug into the wall socket and the other end into the charger (2-pin). Please refer to the LED indicator description based on charging status of the charger's manual. Once the batteries are completely charged, unplug the A/C cord from the wall then unplug the 3-pin lead from the tiller.

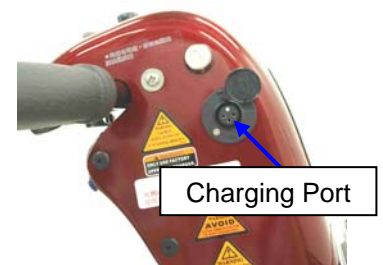

WARNING: Only use the original Shoprider® approved charger!

This charger is for indoor use only. DO NOT expose it to rain or water spray.

Do not leave the charger plugged into the charger port if the charger is not charging.



MAINTENANCE

Lubrication

At six-month intervals you should lubricate the following parts with a light oil or similar lubricant:

- Seat pivot post.
- Seat release lever pinion.
- Wheel bearings.
- Axle of scooter.

CAUTION – DO NOT USE WD40 TO LUBRICATE PARTS!! DO NOT LUBRICATE TRANSAXLE/GEAR BOX!! In the event of any difficulties please consult your dealer.

Cleaning

Your scooter should be cleaned as required however as with all electrical equipment you must ensure that extreme care is used to not water damage e any sensitive parts.

Read the following warnings

- **Only** use a soft damp cloth.
- **Never** use a hose to wash your scooter.
- **Do Not** use abrasive cleaning products – Mild detergents only should be used. .

Wheels and Tires

The wheels of your scooter have split rims. This allows any punctures to be repaired easily. To change the wheels remove the center 13 mm bolt and slide the wheel off its axles. Take care not to lose the drive key on the rear wheels. When changing a tire you must deflate the tire first. Remove the four bolts to split the rim if required. Ensure that when refitting the wheel the retaining bolt is fitted with a locking washer (with drive key for the rear wheel). Tire pressure is recommended to be kept at 30 psi on the rear tires and 25 psi on the front. Note when refitting the tube a small amount of air in the tube will prevent the tube from pinching when reassembling the split rim.

Caution: On the tire it states maximum tire pressure is 50psi. This is a maximum tire pressure and the tires should never be inflated to this pressure.

Attention: Tires should be maintained at the correct pressure noted above to ensure even wear and ride comfort.



TROUBLE SHOOTING GUIDE

Circuit Breaker

Your scooter is fitted with the latest in electronic controls that are programmed to protect the electrical system from abnormal overloads. Fitted for extra protection is a circuit breaker, should there be a situation that your scooter stops for no apparent reason please check that the circuit breaker has not popped out. The circuit breaker can be found under the rear chassis cover accessible through a port hole under the seat.

Check List

If your scooter fails to operate, please check the following:

- Unit is switched on.
- All plugs and connectors are firmly fixed.
- Battery level shows full charge.
- Freewheeling device is in the drive position.

If the free wheel device has been operated with the scooter left switched on, then the scooter will not operate until the ignition key has been switched off and then on again.

Please consult your dealer if your scooter does not run after checking these points.



TECHNICAL SPECIFICATIONS

Models		9D
Overall Dimensions: L ¹ x W x H	in	58 x 31 x 41
Front Tire Diameter	Front	2 x 12.5"
Rear Tire Diameter	Rear	2 x 12.5"
Suggested User Weight (on the Level Road)	lb	500
Total Weight (w/ Battery Pack, Basket, Seat)	lb	350
Battery Capacity	_V_Ah x Pcs	12V 75Ah x 2
Charger	Amp	8A
Output Power of Motor (Reference Only)	W	1350
Max. Speed ²	mph	6.9~7.5
Safe Climbing Angle	Degrees (%)	Fig. 6
Range ³ (Per charge w/ standard battery)	mile	25~26.3
Turning Radius	in	100

*****ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE*****

1. Not the anti-tip wheels
2. Driver weight may exceed weight of the unit; although the speed must be reduced when turning.
3. The actual driving range varies with the factors shown below:
 - a) the weight of occupant
 - b) ground surface
 - c) battery conditions
 - d) type of charger
 - e) ambient temperature
 - f) the way of driving
 - g) terrain
 - h) the wind speed
 - i) etc.

SHOPRIDER®

NOTES



Disclaimer

Congratulations on your purchase of the Shoprider® Scooter.

This Scooter is not intended to be used by individuals with physical limitations that could prevent the user from operating the Scooter safely. Shoprider® disclaims all responsibility for any personal injury or property damage, which may occur as a result of improper or unsafe use of its products.

Warranty is only valid when genuine Shoprider® parts are used. All modifications on the Scooter, unless approved and authorized by Shoprider® will automatically invalidate the warranties. Standard warranty does not extend to consumable items and parties other than the original user.

The preceding guidance is intended to assist you in the safe operation of this Scooter. If you should have any questions about the correct operation of the Scooter, please contact your authorized Shoprider® provider.

Model Name –

Provider Stamp

Serial No.: _____

P/N: